

President Adams Frequency Display



Frequency range: 26.200 to 27.995

How to use:

Press rotary encoder for 1 sec. to switch between channel- and frequency mode. The last channel/frequency in each mode is stored separately.

In frequency mode, press rotary encoder shortly to switch between 5k and 100k tuning steps.

In channel mode, press rotary encoder shortly to switch between normal 40 channels and UK channels. UK channels are shown by a dot. The scan is now a real scanner and works in channel mode (UK and normal).

Changing ch19 (M1) memory channel:

Press and hold rotary encoder while powering the radio on and then release it. The display flashes. Now choose the wanted channel and press rotary encoder again. The channel is stored and can be switched by M1 (Ch19) switch.